

Brief Instructions for T600 Motorola Radio

On the keyboard of your radio you will find 5 keys. We will only be using the following:
Mode/Power, Menu and +/-

You will want your screen to look like what you see below. The top, larger number is the Channel. The bottom, smaller number is the Interference Elimination Code (Privacy Code)

7
0

Mode/Power Key: Use ONLY for Power ON/OFF

For ON: Press and hold for about 3-4 seconds until screen lights up

For OFF: Repeat above

+ and – Keys: Change Volume by simply pressing + OR -- You will also use these keys if you are changing Channel or the Privacy Code. (see below)

Menu/Lock Key: Menu has 9 settings, one after another. We will use only the first 2 menu items:

- 1) Channel: 1-22. We will use Channel 7 for our practice drills and for the Emergency Network.

To change channel: Press the Menu key once, but do not hold. The Channel #, the large number in the center of the screen, will be flashing to allow a change. Use the + or – key to make a change. Then simply allow the blinking to stop. The change will be permanent.

- 2) Privacy Code: 1-121 possible settings. We will always use Code 0 (or OFF). If this is already set at 0 then leave it alone. If you need to get it back to 0 then press the Menu key twice, and you will see the smaller number below the Channel number flashing. Use the + and – keys to change to 0. Then allow the blinking to stop and the change will be permanent.

There's no reason to use the LOCK feature, but if you find that you cannot change anything then somehow the phone got locked. You will see the lock icon on the screen. To unlock, press and hold the Menu key down for 3-4 seconds until the lock icon disappears.